

Activating The Water Ball

STEP 1

Remove the Water Ball from the package. Attach the activating wrap by stretching the tab around the spout of a faucet & run water at full speed for 15-20 seconds. Shake gently while flushing.


STEP 2

Remove the activating wrap. THEN RETURN the elastic strap with "The Water Ball by CuZn" lettering on it to the top of the Water Ball. The elastic strap may be used in tandem with the faucet strap to connect the Water Ball to uniquely shaped spouts (see below)

STEP 3

Enjoy The Water Ball! Replace the filter inside The Water Ball every 6 months or 180 gallons, whichever comes first.

** Dark coconut shell carbon fines will appear during the activating period. They are harmless and are removed during the activating period**

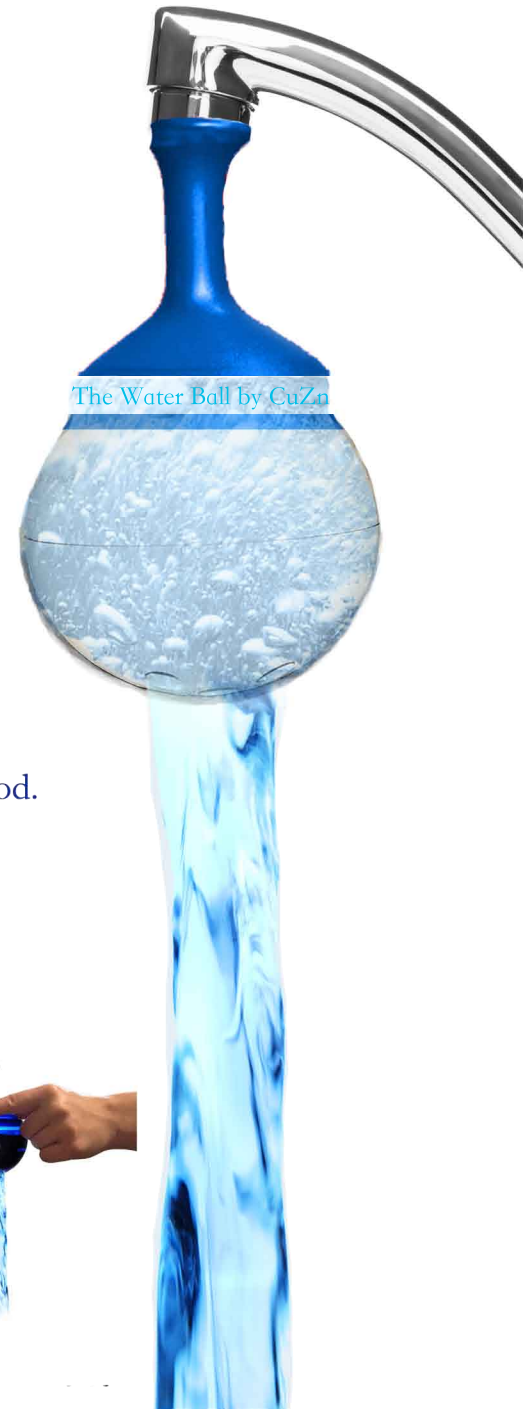

Straps included for secure attachment to virtually any faucet

Limited Warranty

This CuZn filter is designed for use on potable systems only. Its effectiveness may be reduced in areas where municipally treated water has chemicals such as polyphosphates to alleviate water problems caused by high iron content. Do not use this filter in water supplies that may reach pressures over the recommended use stated on the instructions. The manufacturer warrants this product to be free from defects in materials and workmanship when installed, operated, and maintained in the manner instructed, for a period of one year from date of purchase. The warranty is limited to the repair or replacement of any filter that fails to perform due to faulty materials or workmanship during the warranty period. To qualify for this warranty, the filter must be maintained and replaced as stated in the instructions. Save your receipt. CuZn is not responsible for any damages occurring during the misuse of this product.



800.345.PURE(7873)
www.CuZn.com

